




we create sustainable outdoor living

C312


NAPA PUB SWIVEL CHAIR

C312C


NAPA COUNTER SWIVEL CHAIR

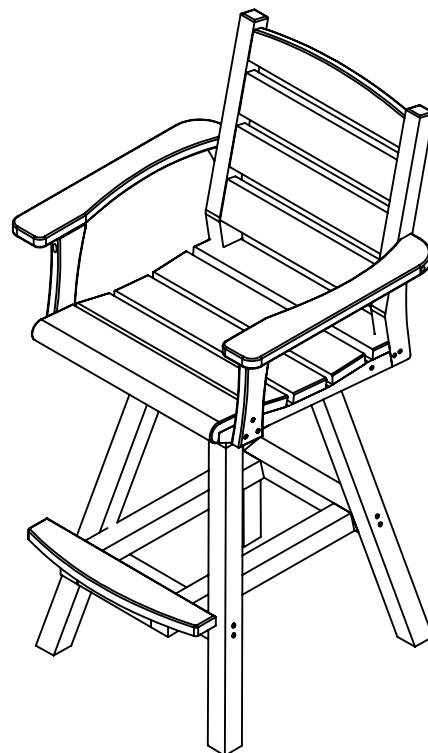

Box includes:

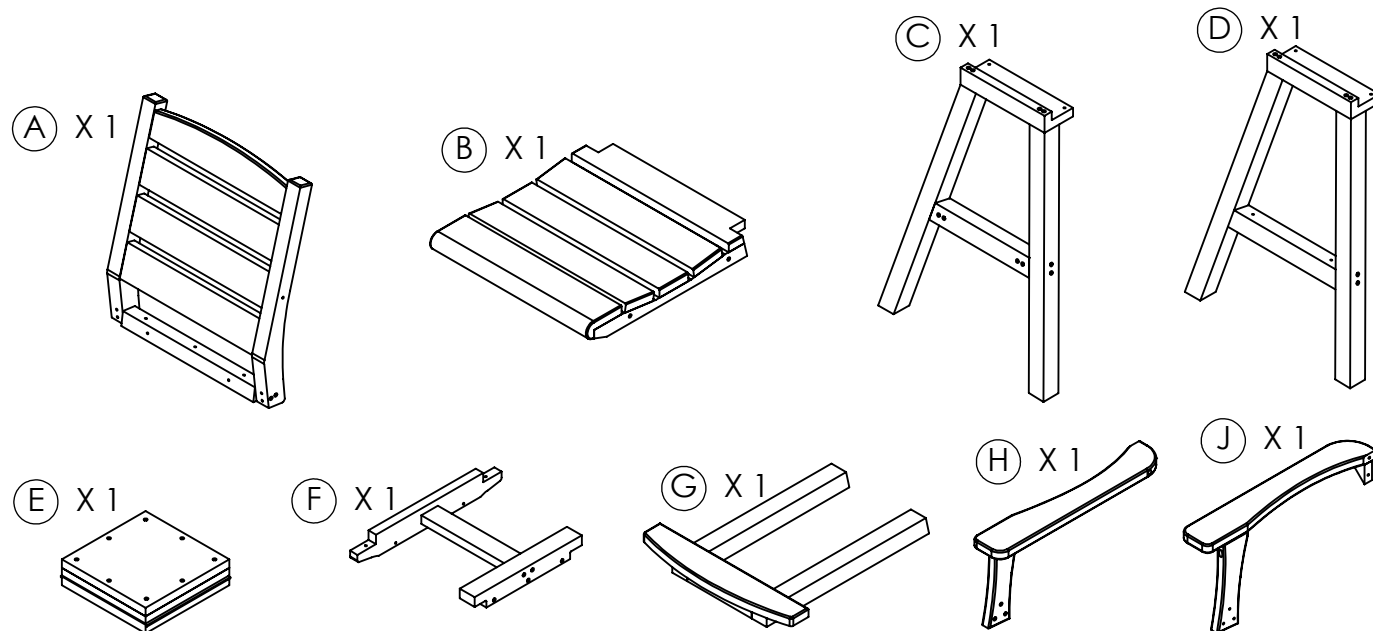

Screw pack includes:

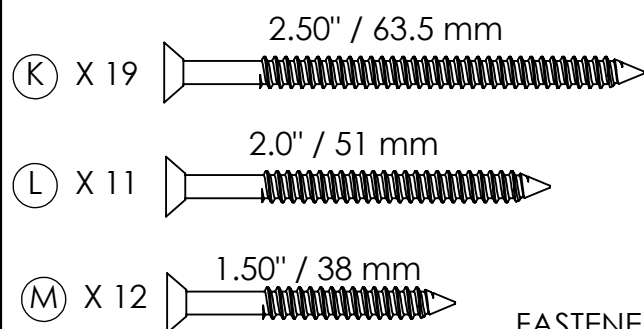

FASTENERS SCALE TO 1:1






#2



www.crpproducts.com



SEPARATE ALL FASTENERS BY SIZE BEFORE STARTING ASSEMBLY:



FASTENERS SCALE TO 1:1



1

(E) X 1

(C) X 1

(D) X 1



(M) X 8

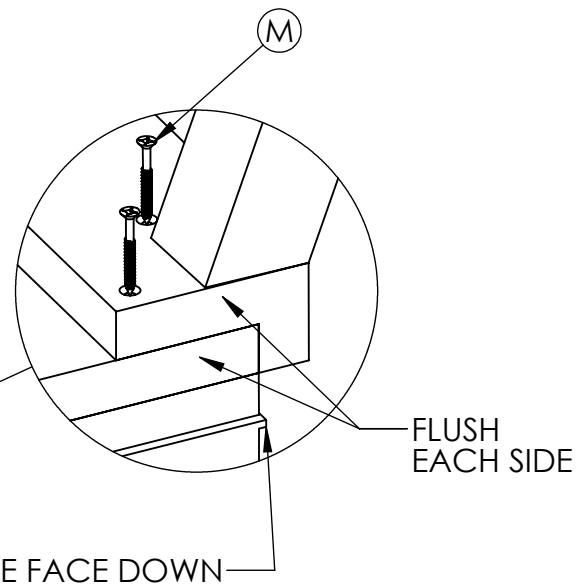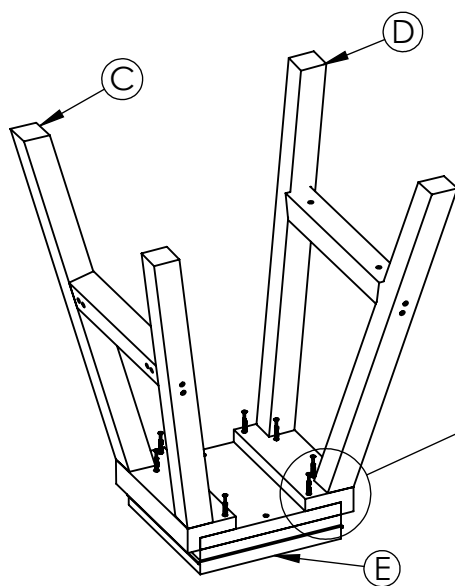

2

(G) X 1

(K) X 4

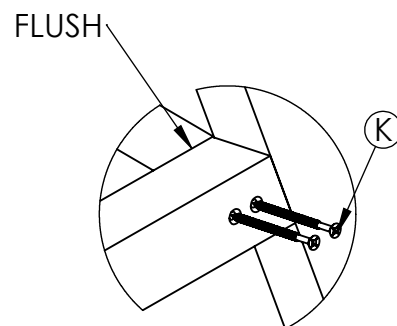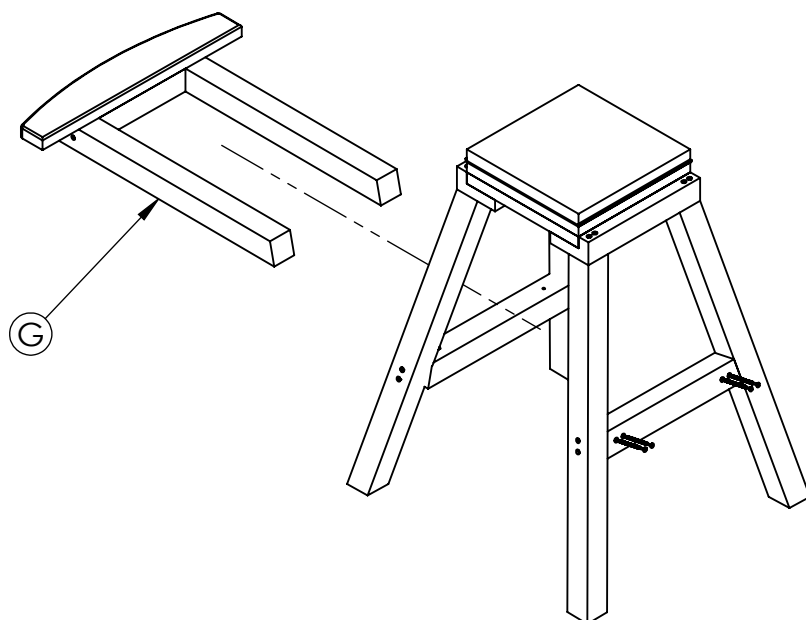


NOTE:
TWO SCREWS EACH SIDE

3

(K) X 4


STEP 3.1:

NOTE:
ONE SCREW EACH SIDE

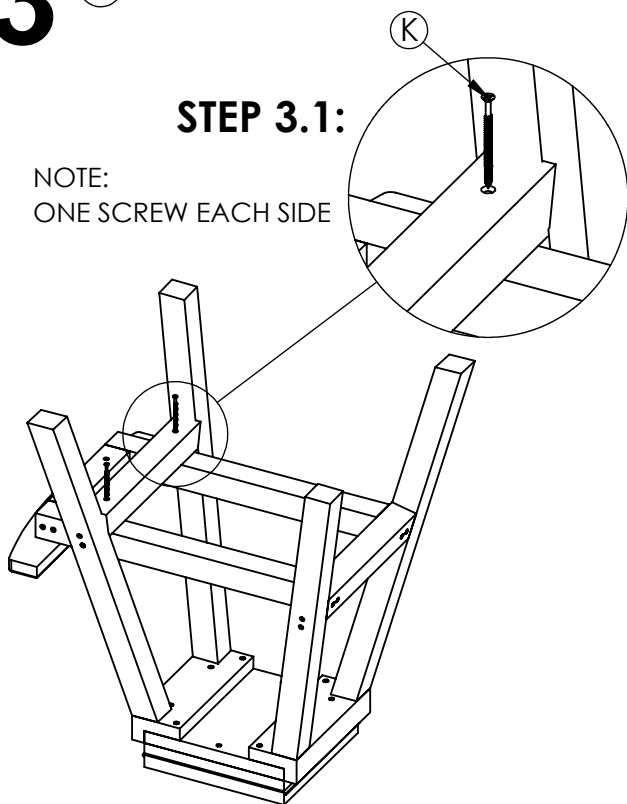

STEP 3.2:

PRE-INSTALLED

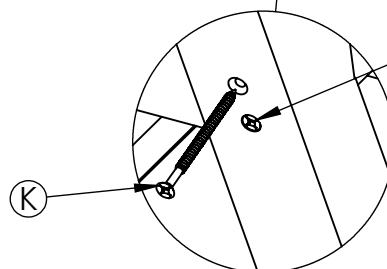


NOTE: ONE SCREW EACH SIDE

4



(F) X 1
(K) X 3
(M) X 2



CHECK THE SCREW SCLAE 1:1 BEFORE USE

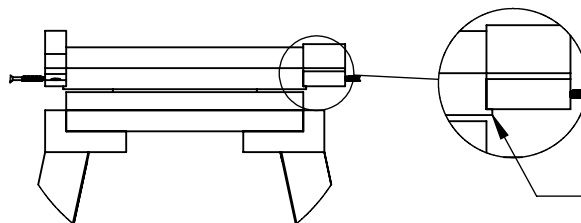

PLACE (F) ON THE LIP OF (E).

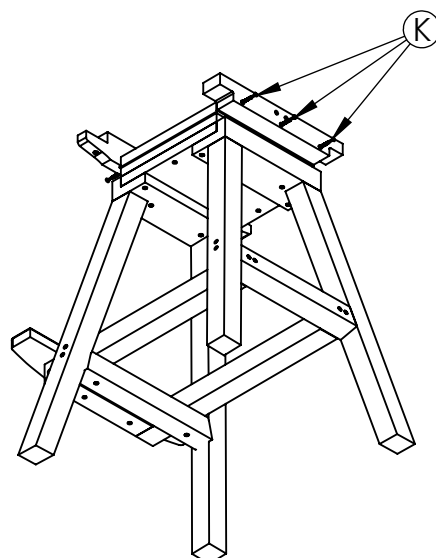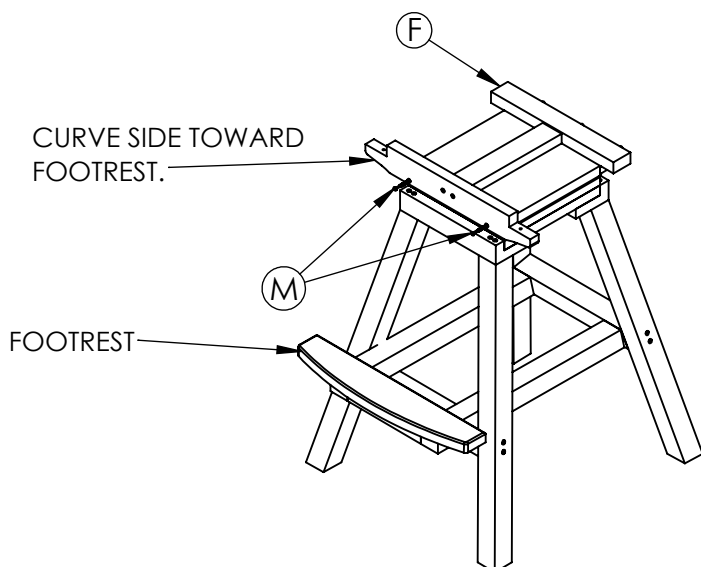

5



(A) X 1

(B) X 1

(K) X 4



CHECK THE SCREW SCLAE 1:1 BEFORE USE

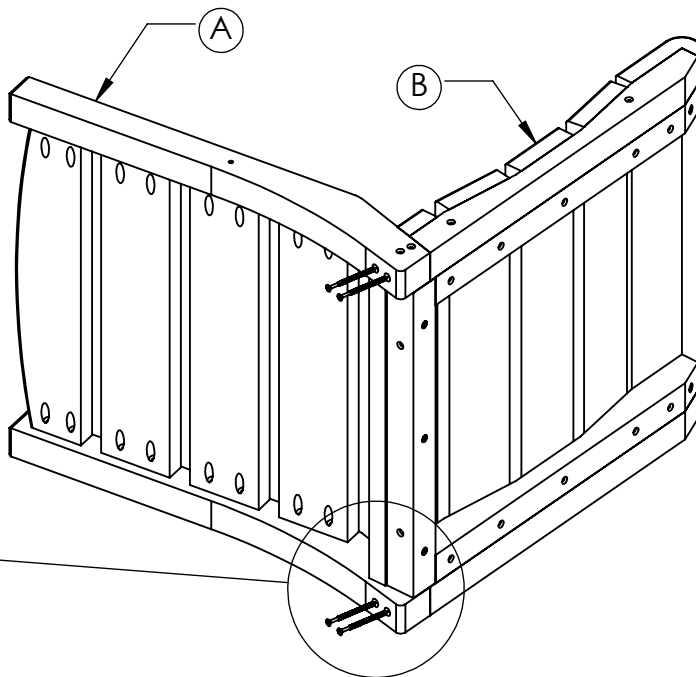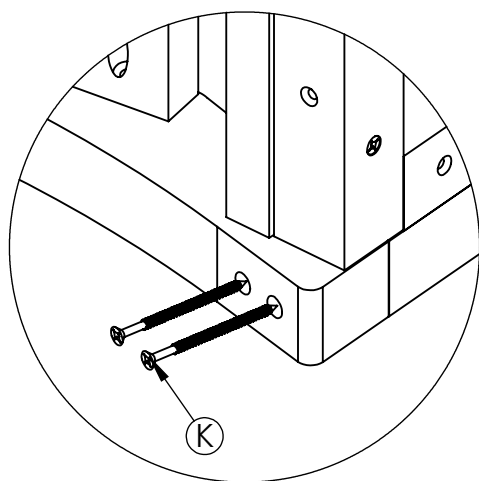



NOTE: TWO SCREWS OTHER SIDE.

6

(L) X 3



CHECK THE SCREW SCLAE 1:1 BEFORE USE

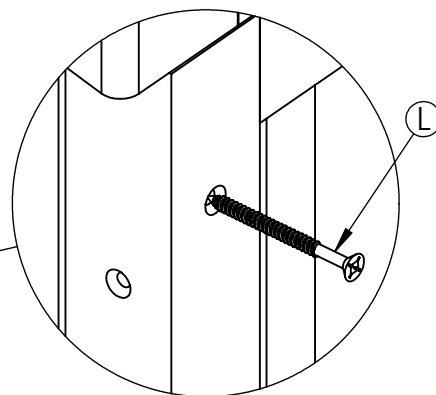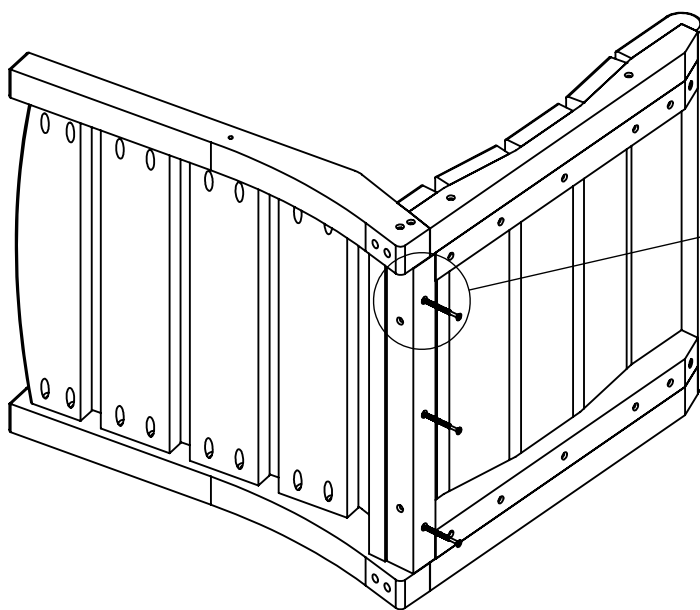


7

(K) X 2
(L) X 2




CHECK THE SCREW SCLAE 1:1 BEFORE USE

STEP 7.1:

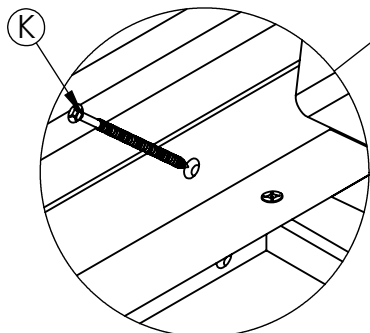


NOTE: ONE SCREW EASH SIDE.

STEP 7.2:

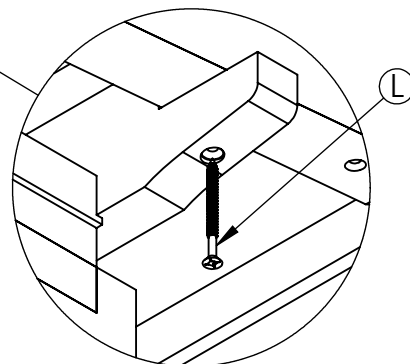

NOTE: ONE SCREW OTHER SIDE.

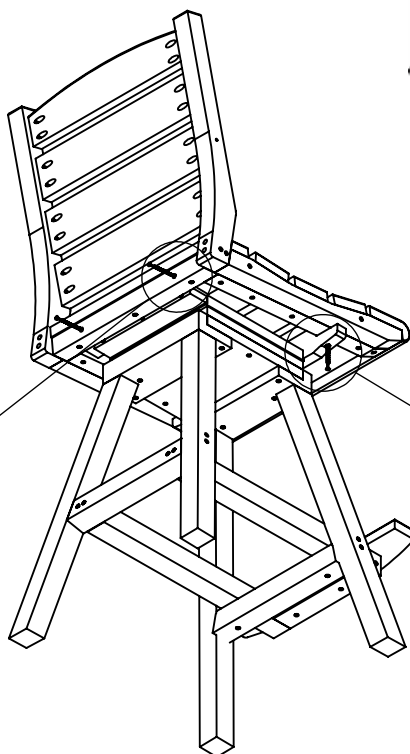


8

(H) X 1
(J) X 1
(K) X 2
(L) X 6
(M) X 2




CHECK THE SCREW SCLAE 1:1 BEFORE USE

STEP 8.1:

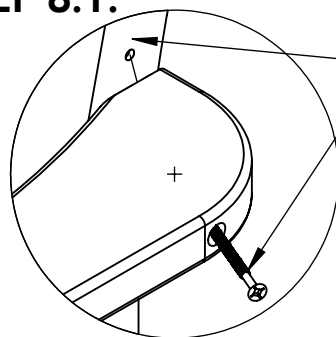



ALIGN (K)
TO PECK MARK

STEP 8.2:

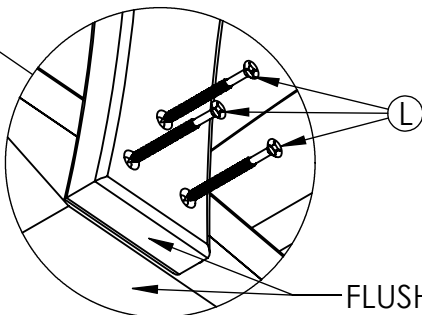

FLUSH

STEP 8.3:

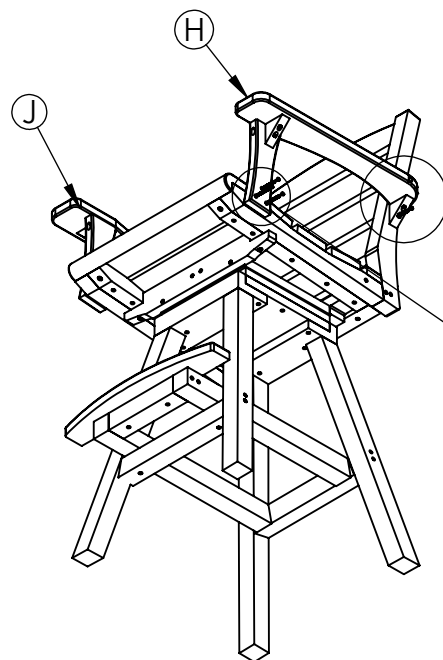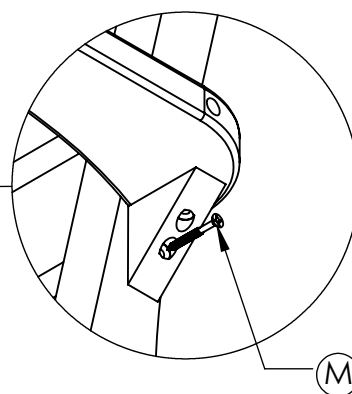

NOTE: REPEAT SAME STEPS FOR OTHER SIDE OF ARM (J).

