




we create sustainable outdoor living

TB22/TB23 TT15


TB23/TB22:

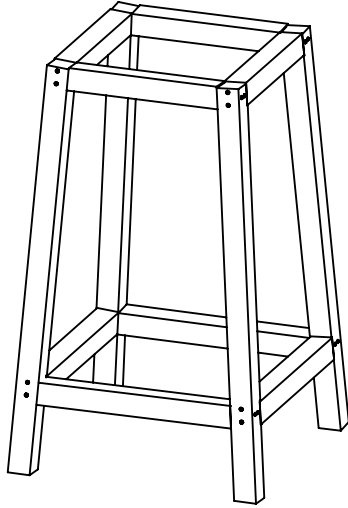


TT15:

BOX INCLUDES:

ⓐ x 1

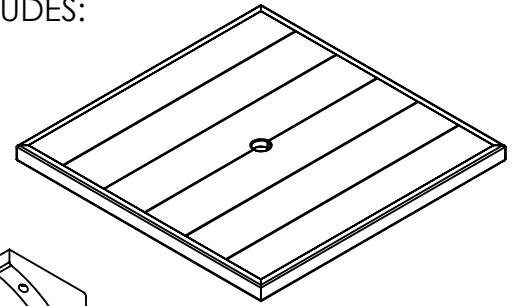


Ⓚ x 8



TT15 SCREW PACK:

ⓓ x 19







TB23/22 BOX INCLUDES:

ⓐ x 1


ⓑ x 1

ⓒ x 1


ⓓ x 1

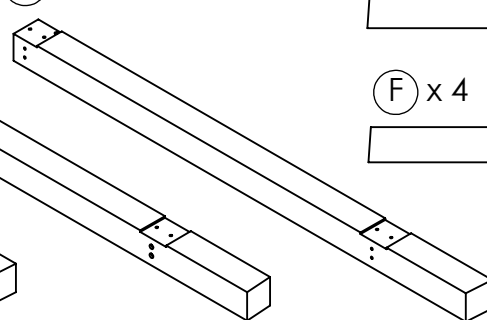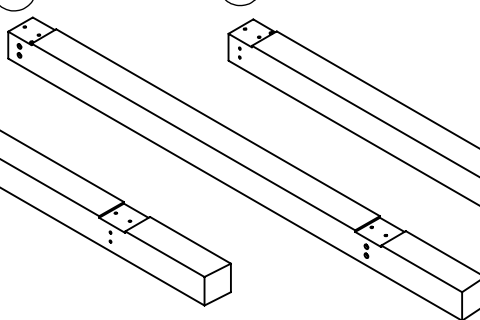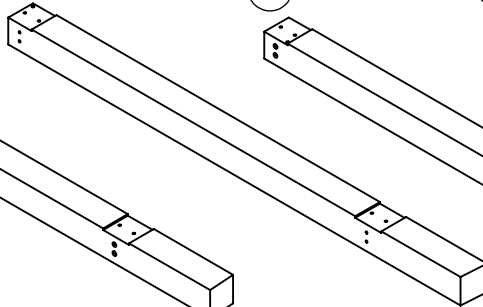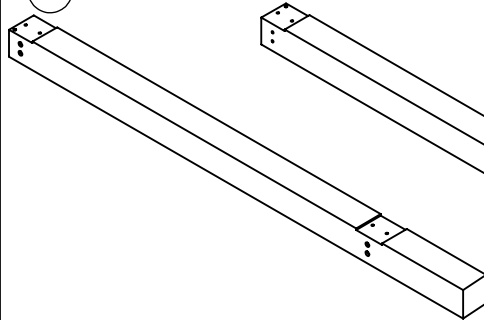

ⓔ x 4




ⓕ x 4




TB23/22 SCREW PACK:

ⓖ x 32



ⓓ x 6



FASTENER SCALE TO 1:1




#2



www.crpproducts.com

1

ARRANGE PART A,B,C,D AS BELOW.

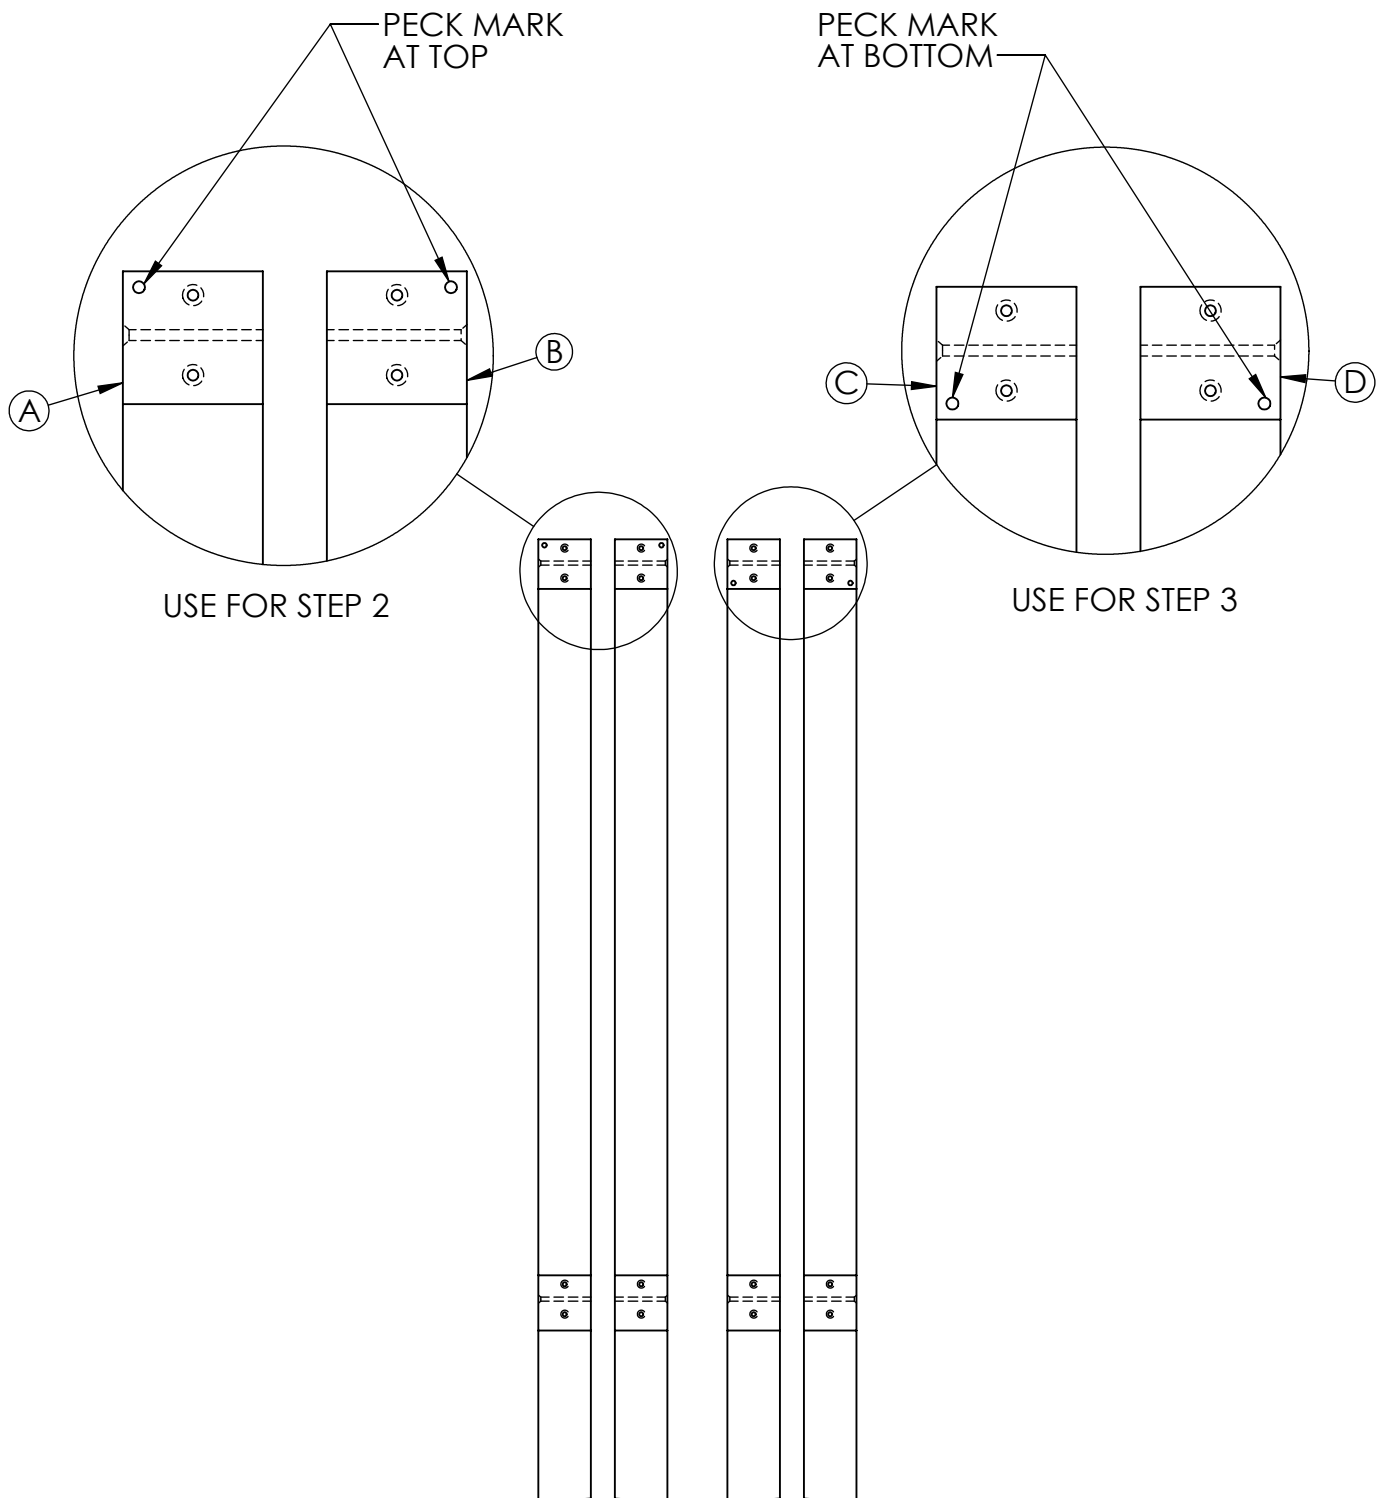

2

Ⓐ x 1


Ⓑ x 1

Ⓔ x 1


Ⓕ x 1

Ⓖ x 8

ALIGN TO NOTCH.

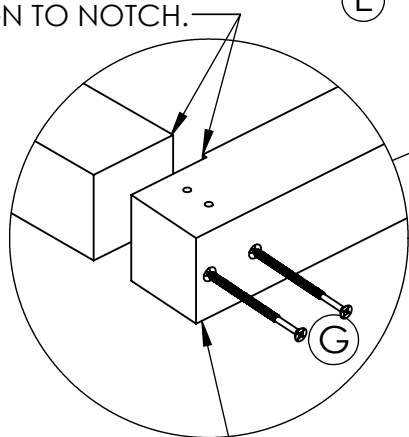

COUNTERSINK SIDE FACE DOWN.

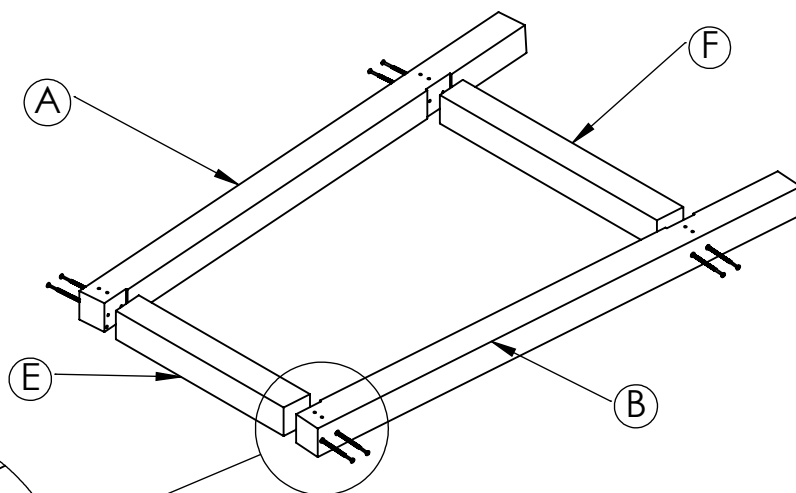

3

Ⓒ x 1


Ⓓ x 1

Ⓔ x 1


Ⓕ x 1

Ⓖ x 8

ALIGN TO NOTCH.

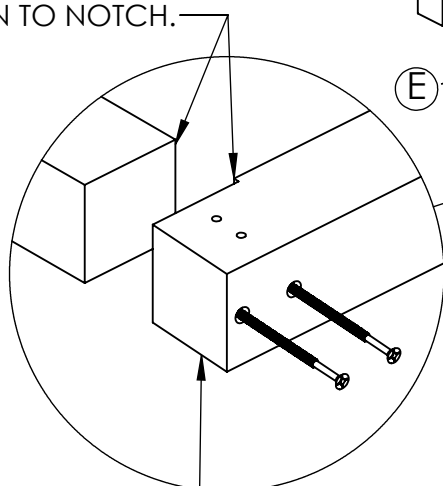


COUNTERSINK SIDE FACE DOWN.

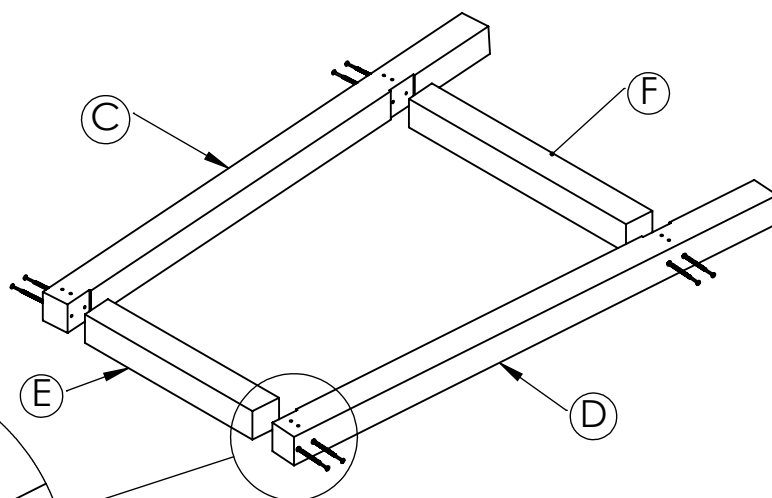


4

Ⓔ x 1
Ⓕ x 1
Ⓖ x 8

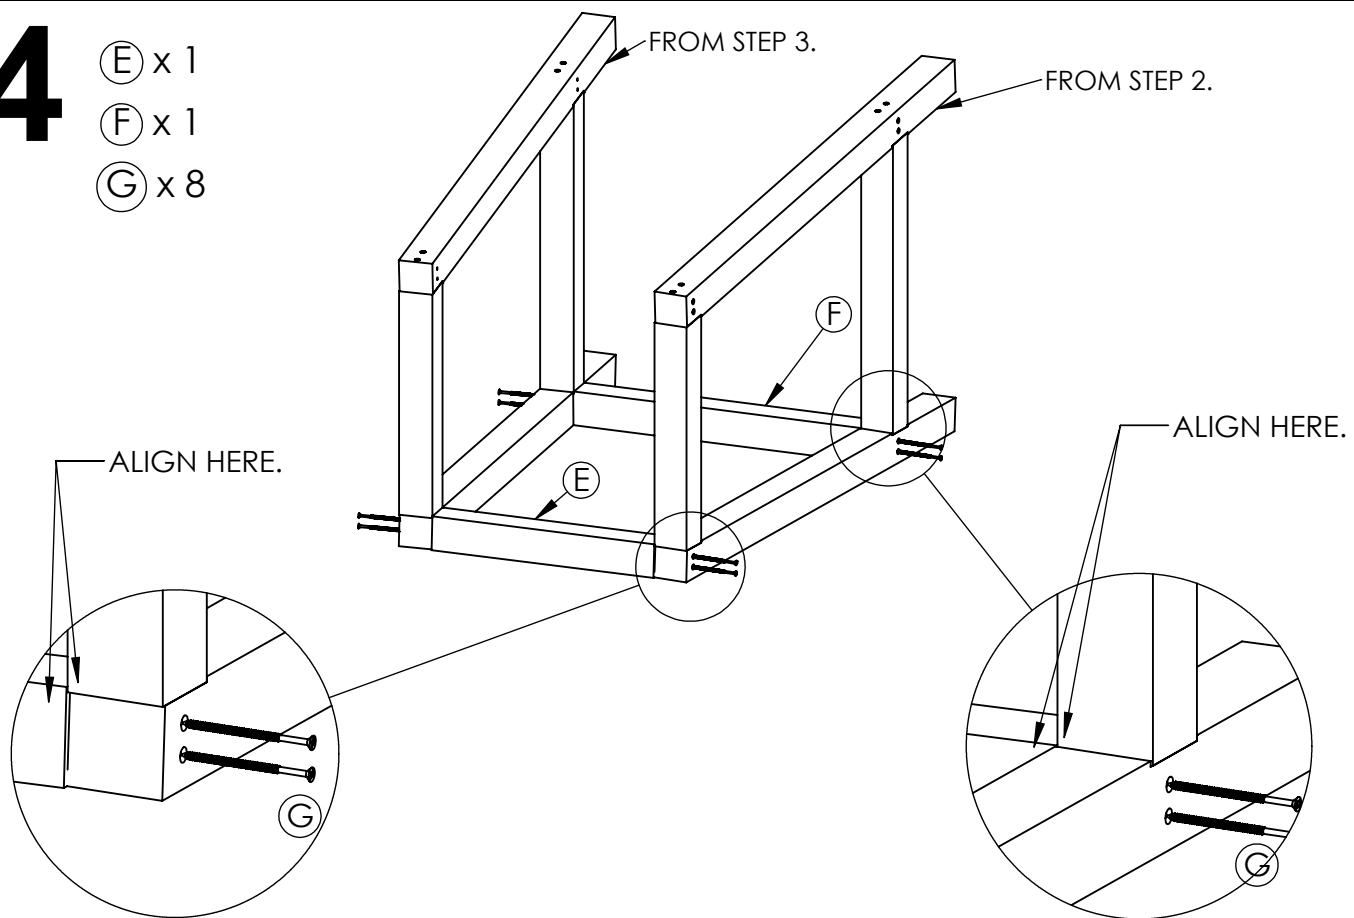

5


Ⓔ x 1
Ⓕ x 1
Ⓖ x 8

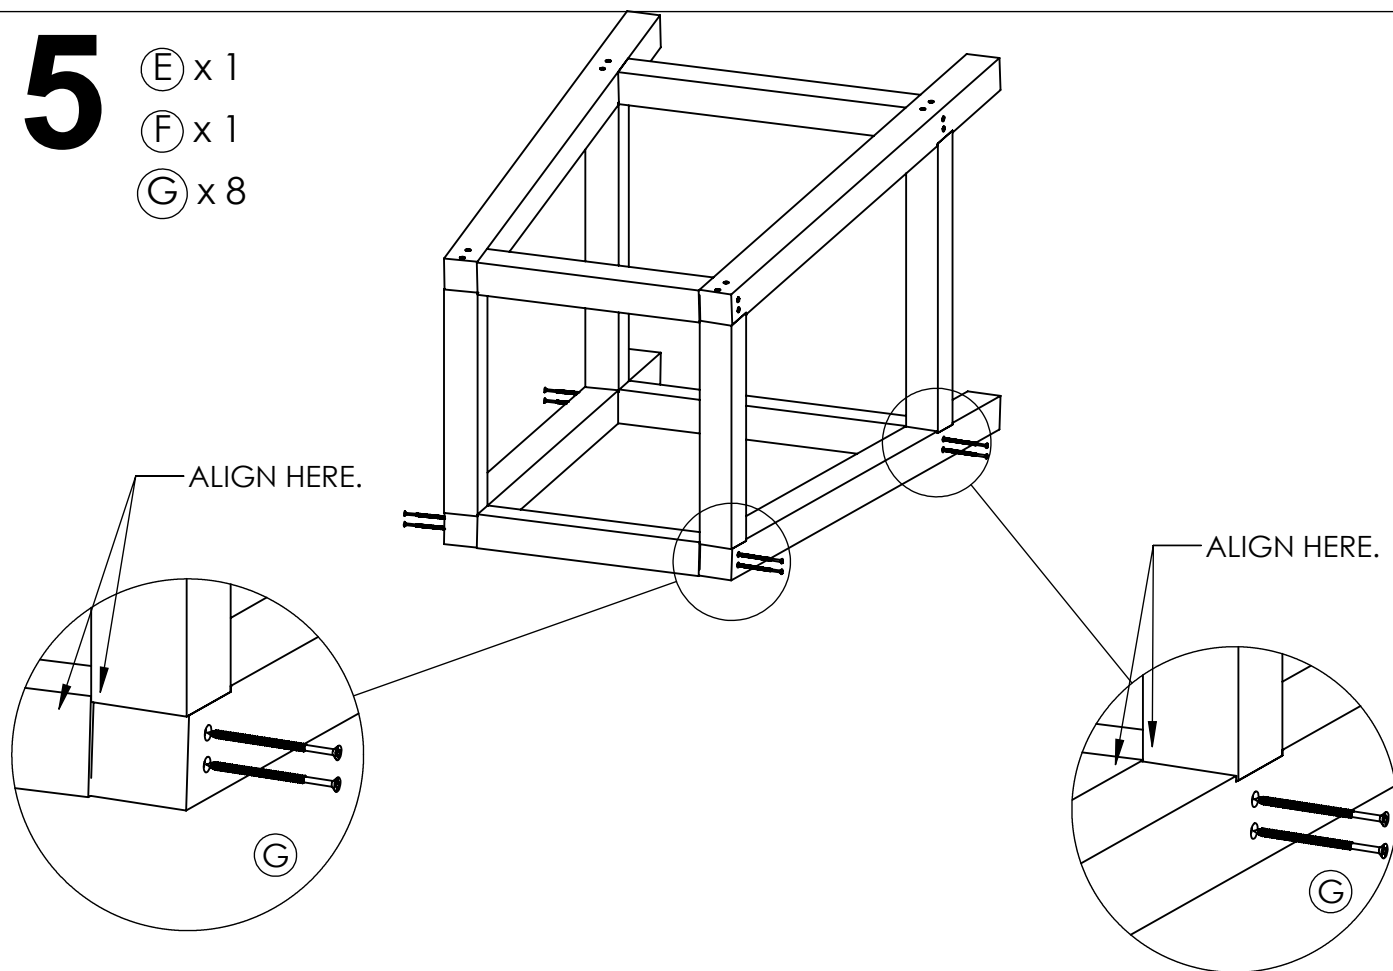

6

Ⓜ x 8

Ⓜ x 1

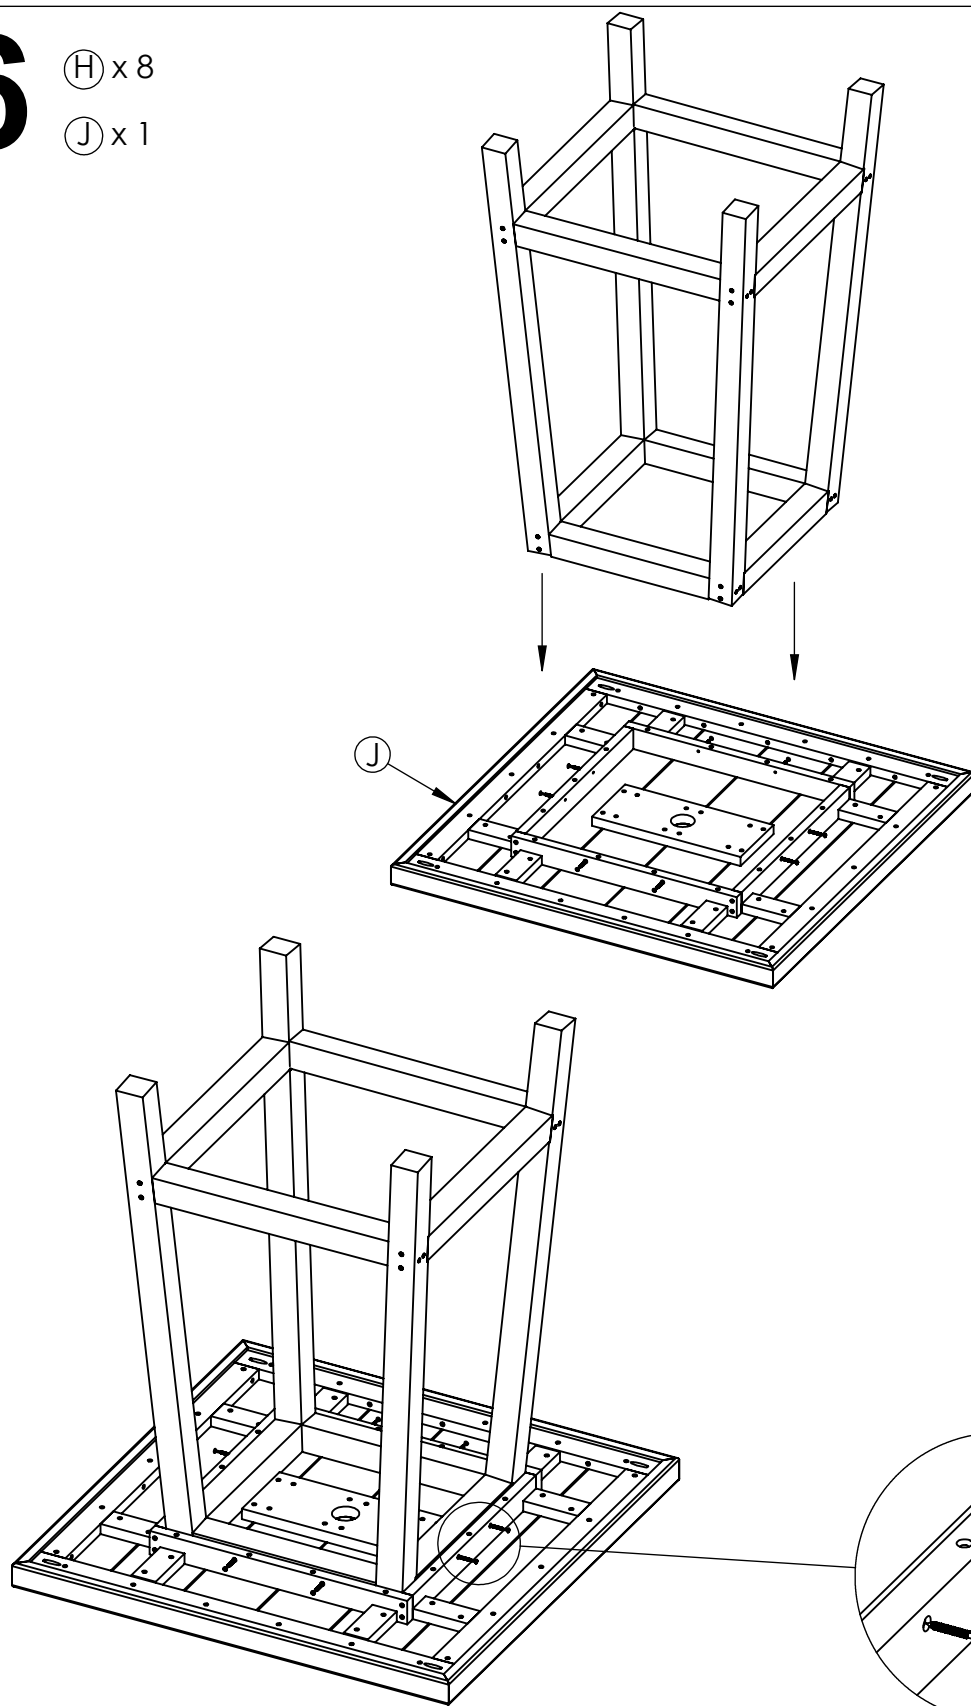

NOTE:
2 SCREWS ON ALL FOUR SIDES.

NOTE:


6X Ⓜ FROM TB22/23 SCREW PACK.
2X Ⓜ FROM TT15 SCREW PACK.

7

(H) x 16


(K) x 8

WRONG IF CURVE SIDE
WITH TABLE TOP

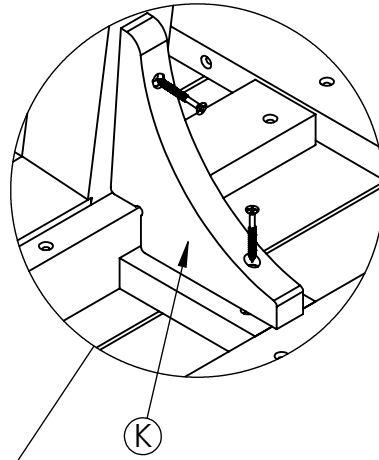


(K)


CURVE SIDE
WITH BASE

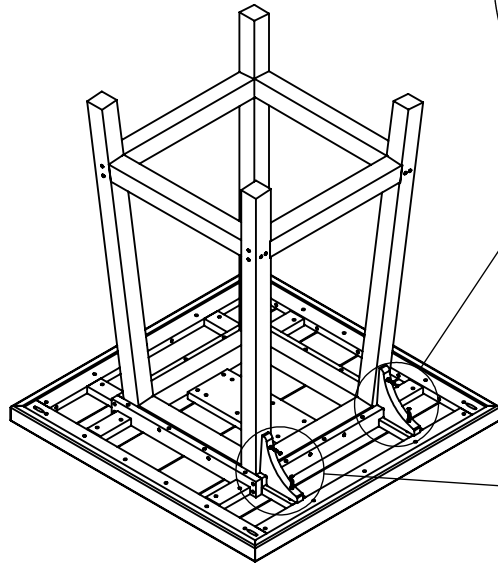

FLUSH THIS.

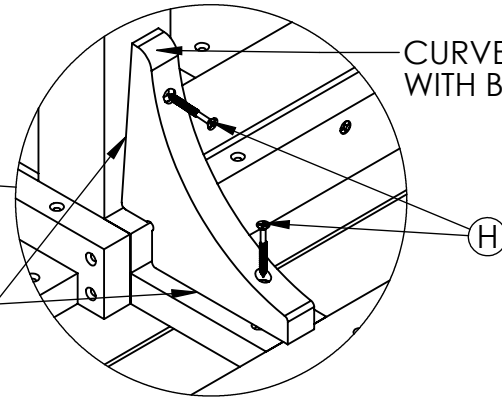


(H)

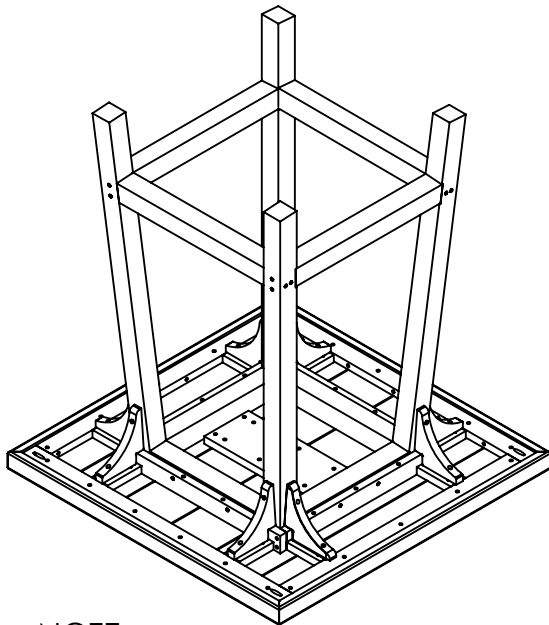

NOTE:
ATTACH 2x (K) PER SIDE.

(H) x 1



EXTRA FASTENER.

